

SoliSense®

Suspended Solids Monitor

The SoliSense[®] range of Suspended Solids/Turbidity analyzers provides a single sensor with a large dynamic range which utilizes a patent applied for measurement technology that eliminates the need for a "zero" and also eliminates the effect of background light. For multiple measuring ranges the one sensor can monitor Turbidity and Suspended Solids from 2 NTU (1mg/l) to 8%^{*} solids in one sensor.

- Autoclean optical sensor minimal operator intervention
- Stable and reliable excellent process control
- Suitable for all potable, waste and process waters
- Up to 12 months between maintenance
- Up to 12 months between calibration
- From 2 NTU (1mg/l) to 8%* Solids
- Up to 10 Bar



* 8% in typical municipal waste water slurries. This value will vary depending on the optical properties of the sample.


The SoliSense[®] sensors are available with different controllers giving you the same great performance with different communication, display, and control options.



Principle of Operation

the turbidity in water using a measurement of the mounting in a channel or tank, or in a low pressure or high backscattered light. The SoliSense® sensor uses lifetime based pressure flow cell, or inserted into a pipe via a valve which optical technology to provide an extremely stable, accurate, low-maintenance sensor, with no moving parts and no shutting down the process. See Technical Note 16, SoliSense consumables.

Each sensor is fitted with a light source and two detectors for making the measurements. Having two detectors, positioned at different distances from the light source, allows the sensor to be used over a wide range of suspended solids concentrations. The light source is a long life infra-red LED emitter (providing for 15 years working life). The detectors are matched photodiodes. The detectors in the SoliSense® are positioned to detect backscattered light (light that is scattered by >90°). By measuring back scattered light the sensor can be used to detect high low and concentrations of solids. The

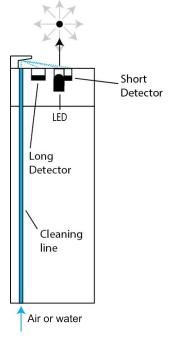

SoliSense[®] uses Pi's novel measurement technique that uses the gradient between the four readings to produce the automated to carry out the cleaning at predefined intervals. sensor output. This configuration allows accurate and reliable measurements of suspended solids concentrations and turbidity to be made.

Mounting

The sensor determines the suspended solids concentration or The SoliSense® can be mounted on the end of a pole for dip allows for retraction and removal of the sensor without Mounting Options, for more details.

Calibration

Calibration of the SoliSense® for turbidity measurements or measurements of samples with low concentrations of solids is very easy only requiring a single calibration sample. This sample can either be a reading from another method or a suitable standard. The analyzer calibrates the sensor by a procedure that reduces the light output through four stages, taking measurements at each. This process provides an accurate and reliable zero and span without the requirement to use a '0' NTU/solids sample.

Calibration of the SoliSense® for the measurement of samples with high concentrations of solids uses a multi-point procedure. Up to 5 calibration points can be used to give an accurate performance across a wide range of sample concentrations.

Cleaning

To keep the sensor clean, the SoliSense® is fitted with a cleaning nozzle. This can be used to clean the optical windows automatically takes readings at four different light levels and with a jet of clean water. This cleaning procedure can be

Descent	
Range:	Up to 500g/I, 4000 NTU (depending on the optical properties of the sample)
Units:	Selectable g/l, mg/l, ppm, ppt or % (suspended solids) NTU or FNU (turbidity)
Accuracy:	<2% of measured value or 0.01g/l or 0.8 NTU (whichever is greater)
Reproducibility:	<1% of measuring value or 0.001g/l or 0.8 NTU (whichever is greater)
Limit of Detection:	0.001g/l or 2.4 NTU
Resolution:	Up to 0.00001g/L
Response Time:	$T_{90} \ge 10$ sec (adjustable based on averaging)
Drift (electronic):	None
Averaging:	Configurable (10sec-10min)
Lamp Source:	IR LED (860nm)
Weight:	Approximately 1kg (35oz.)
Process Temperature:	0-50°C (32-122°F)
Operating Pressure:	10 bar (145psi) [maximum]
IP Rating:	IP68
Mounting Thread (for dip installation):	1" BSP
Max. Power Consumption:	70mA at 15 VDC
Cable Length:	6m (20ft.) as standard (extendable by request)
Wetted Parts:	316 stainless steel, sapphire
Diameter:	38mm (1.49in.)
Length:	230mm (9.06in.)

*All subject to change without notice

www.processinstruments.net

