CRONOS[®] Water Quality Analyzer Water Quality Monitor Water Quality Controller

Water Quality Controller Water Quality Instrument



High Quality-Low Cost

Part of a range of controllers, the CRONOS® is the little brother of the CRIUS®. The CRONOS® is a high quality, low cost transmitter designed to give water treatment engineers everything that they need from a transmitter and nothing that they don't.

Superior Communications

With no frills, costs can be kept to a minimum whilst optional comms packages allow Profibus, Modbus ASCII, Modbus RTU, Modbus TCP, 4-20mA analogue outputs, and relays for alarms and control.

PID Control Options

CRONOS® has the capability to control up to two sensors of any type with appropriate analogue outputs and relays. Equipped with optional PID control CRONOS® is very able to control complex water treatment processes at a fraction of the cost of other controllers.

Proactive Sensor Maintenance

For each sensor the CRONOS® will prompt users through calibration procedures and will remind them when maintenance is due for each sensor type.

Customers requiring additional functionality such as a colour display, downloadable data logs, or remote access via the internet should consider a CRIUS® controller.

CRONOS® + Sensors = Product Name

Free Chlorine Analyzer	Ha
Total Chlorine Monitor	Há
Chlorine Dioxide Analyzer	Di
Ozone Monitor	02
Dissolved Oxygen Meter	0
Suspended Solids Monitor	Sc
Streaming Current Monitor	St
pH Analyzer	pł
ORP Analyzer	0
Organics Monitor	U
Biofilm Monitor	Bi
Online Conductivity Monitor	Co
Particle Counter	Co
Filter Monitor (Particle Counter)	Fi
Turbidity Monitor	
	Τι

aloSense aloSense ioSense zoSense xySense oliSense treamerSense HSense RPSense V254Sense ioSense onductiSense ounterSense ilterSense urbSense


Each 'Sense' analyzer has its own brochure, detailing applications and common accessories. Please click on the product name above if you are online. If not, please visit the website to access all Pi's product brochures.

CRONOS® CRIUS®


		CICIOS
Highest quality sensors	٠	•
Multilingual	۰	•
System logger	•	•
On display trending	٠	•
Event logger	٠	٠
Download logs	Optional	•
PID controls	Optional	Optional
Up to 2 sensors	٠	٠
Up to 4 sensors		•
Expandable up to 16 sensors		Optional
Analogue outputs V and mA	٠	•
Isolated universal inputs & outputs	٠	•
Large high resolution display	٠	•
Color display	Optional	•
Up to 8 relays	•	•
Expandable up to 32 relays		Optional
Up to 8 digital inputs	٠	٠
Expandable up to 32 digital inputs		Optional
Remote internet access		Optional
GSM/GPRS/3G/4G integrated moder	n	Optional
Remote Access LAN		Optional
Profibus	Optional	Optional
Modbus ASCII/RTU serial	Optional	Optional
Modbus TCP (LAN enabled)	Optional	Optional
AC/DC (110-240VAC, 12VDC)	٠	٠
Wall and Panel mountable	٠	•
Pole and handrail mountable	٠	•
IP65/Nema 4X enclosure	٠	•
Fire retardant ABS Enclosure	٠	٠

www.processinstruments.net

Dimensions

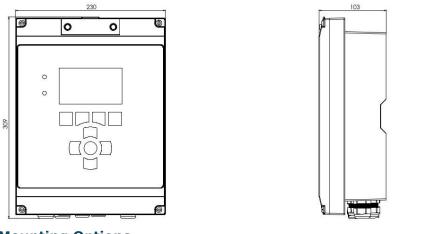

Mounting Options

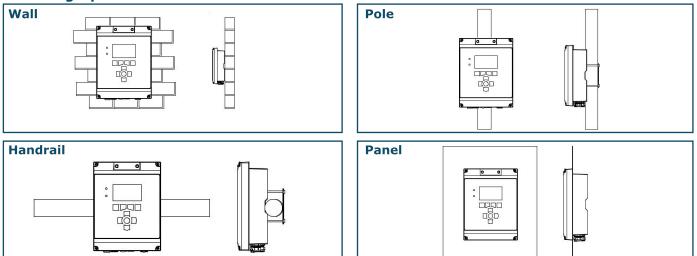

*All subject to change without notice

Specification* CRONOS[®]

CRUNUS	
Power Requirements	100-240 VAC/0.25 A or 12 VDC/0.8 A
Languages	Any non pictogram by request
	Any Latin, Cyrillic, Hellenic
Inputs	Up to 2 configurable sensor inputs; 4-20mA, 4-20mA loop-powered, 0-2 VDC, +/- 1200 mV for pH, ORP, or ISEs, PT100, potentiometric, pulse and Modbus. Unused inputs can be used as outputs. Up to 8 digital inputs
Outputs	Up to 2 dedicated configurable analogue outputs; 0-20mA, 4-20mA, 0-1 VDC, 0-10 VDC, 1-10 VDC. Up to 8 SPDT electromechanical relays rated 10A at 250 VAC and 5A at 30 VDC
Alarms	2 user configurable alarms with deadband and delay for each parameter and control output
Thresholds	2 user configurable thresholds (for control) with deadband and delay for each measurement and control output
PID	Configurable flow proportional PID - multiple loops
Communication (Optional)	Modbus ASCII/RTU (RS485)
	Profibus DP
	Modbus TCP (Ethernet)
Memory Backup	All user configuration is stored in non-volatile on-board flash memory
Enclosure	ABS flame retardant
	IP65, Nema 4X
Dimensions (mm)	230 x 309 x 103
Display	4.3", 480 x 272, 8 bit, greyscale (4.3", 480 x 272, 24 bit color optional)
Weight	2 kg
Warranty	12 months from date of purchase (longer warranty optional)
Data Logging	Internal - Single parameter data log or status message log over 1 million records (downloadable data logs optional)

www.processinstruments.net